

Linksys VoIP Adaptor Setup with Tpad




1. Connect network cable, power supply and analogue handset.

2. After the unit has finished powering up, pick up the handset and dial **** to access the Linksys voice menu. At the voice prompt, dial **110#** and you should hear the IP Address of the unit. Go to a web browser and type in the IP Address like so:

http://IP_ADDRESS/admin/advanced or

use the default local IP address <http://192.168.0.1/admin/advanced>

The administration screen of the Linksys should be displayed.

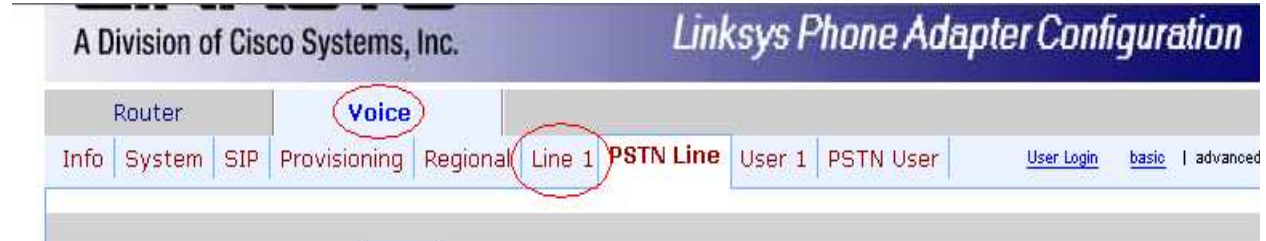

3. Click on **Voice** and then **Line 1** tab and configure your Tpad account details as follows:

Set **Proxy** to: **sip.tpad.com**
Set **Outbound Proxy** to: **sip.tpad.com**
Set **Use Outbound Proxy** to **yes**
Set **Register** to **yes**

On the same page, set up your **Subscriber Information** as displayed in the example below.

Set **Display Name** to your **Tpad Phone Number e.g.1199977**
Set **User ID** to your **Tpad Phone Number e.g.1199977**

Set **Auth ID** to your **Tpad Phone Number**
Set **Password** to your **Tpad Account Password**

Set **Use Auth ID** to **yes**

Proxy and Registration			
Proxy:	sip.tpad.com		
Outbound Proxy:	sip.tpad.com		
Use Outbound Proxy:	yes ▾	Use OB Proxy In Dialog:	yes ▾
Register:	yes ▾	Make Call Without Reg:	no ▾
Register Expires:	3600	Ans Call Without Reg:	no ▾
Use DNS SRV:	no ▾	DNS SRV Auto Prefix:	no ▾
Proxy Fallback Intvl:	3600	Proxy Redundancy Method:	Normal ▾
Subscriber Information			
Display Name:	imtiaz	User ID:	1199977
Password:	*****	Use Auth ID:	yes ▾
Auth ID:	1199977		
Mini Certificate:			
SRTP Private Key:			

Leave all other settings as Default.

Click **SUBMIT ALL CHANGES** at the bottom of the page to save the settings and reboot the Linksys ATA.